


# ULINE S-7339, S-7351

## 4-1 GALLON PAINT CAN FOAM SHIPPER KIT

1-800-295-5510  
uline.com

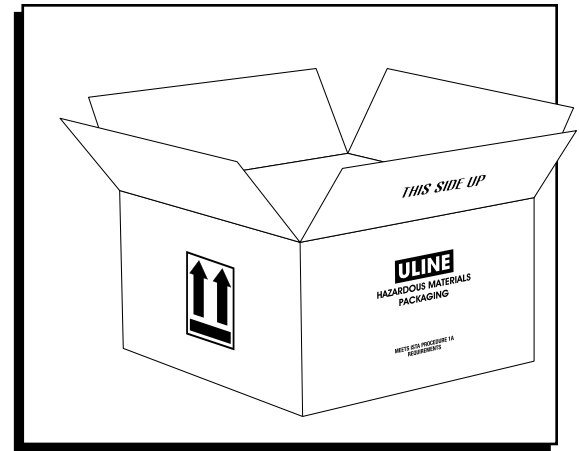

### COMPONENTS

- 1 Corrugated Carton (Uline Model # S-7339)
- 4 - 1 Gallon Can With Lid (Uline Model # S-7342)
- 4 - 1 Gallon Locking Ring (Uline Model # S-7346)
- 8 - 1 Gallon Foam Insert (Uline Model # S-7341)
- 2" Wide (2 mil) Polypropylene Tape (Uline Model # S-472\*)

\*Sold Separately

### ASSEMBLY INSTRUCTIONS

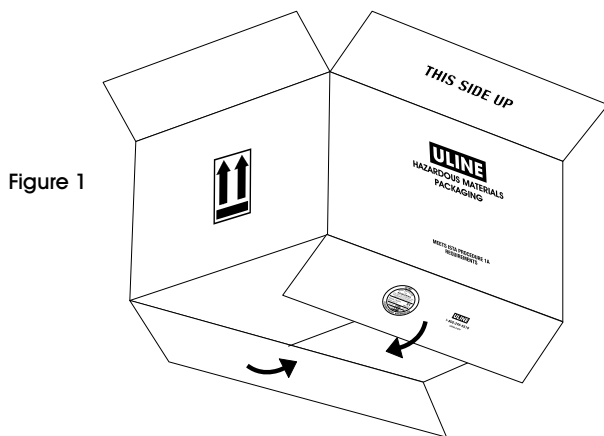


Figure 1

1. Fold flaps on bottom of carton so manufacturer's certification is visible on the outside of the carton. Gap between outside flaps cannot exceed 0.125". (See Figure 1)

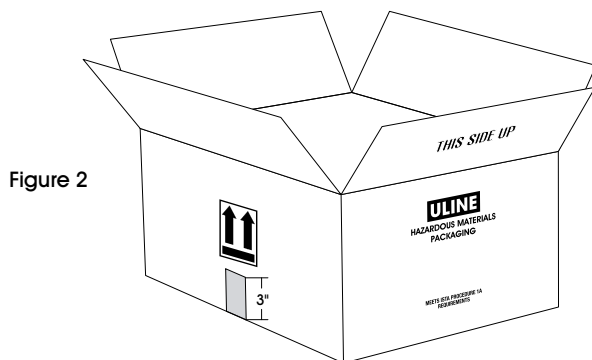


Figure 2

2. Seal bottom of carton down the center seam with one strip of 2" wide (2 mil) polypropylene tape (Uline Model # S-472). The tape must extend 3" over each end of the carton. (See Figure 2)

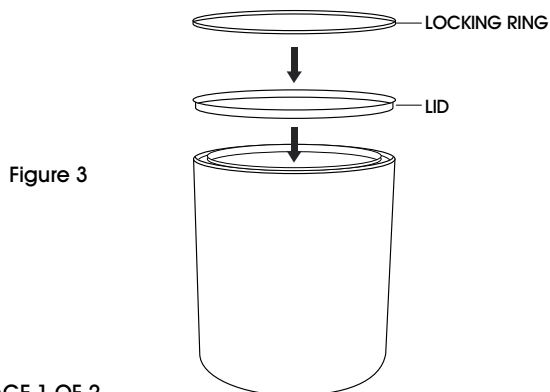


Figure 3

3. Fill cans. Do not overfill.
4. Secure lids completely on cans by applying even pressure with a paint can closer until lids are fully nested. (See Figure 3)
5. Align locking rings evenly over can lids and secure by applying even pressure with a paint can closer. Make sure rings snap into place. (See Figure 3)

## ASSEMBLY INSTRUCTIONS CONTINUED

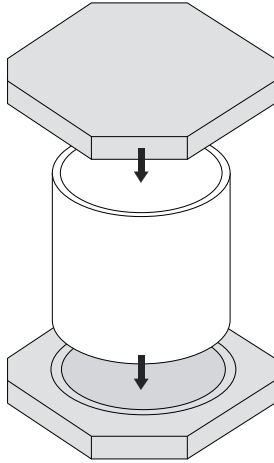


Figure 4

6. Apply one foam insert to both top and bottom of each can. (See Figure 4)

7. Place cans into carton - bottom first.

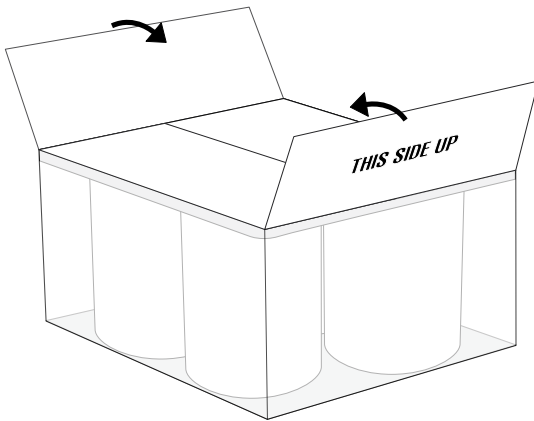


Figure 5

8. Fold flaps on top of carton so that they meet. "THIS SIDE UP" must be visible on the outside of the carton. (See Figure 5)

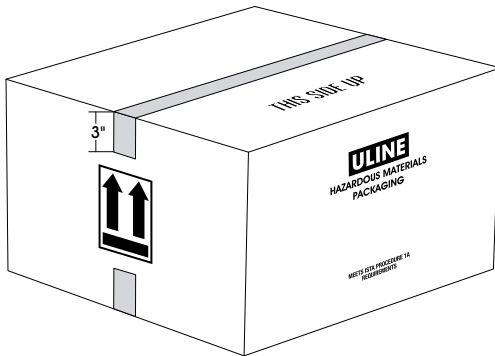


Figure 6

9. Seal top of carton down the center seam with one strip of 2" wide (2 mil) polypropylene tape (Uline Model # S-472). The tape must extend 3" over each end of the carton. (See Figure 6)